



Procedure For Updating DL DIS50 Display with USB drive

A USB drive which has been formatted as FAT32 and the drive named "U" is required.

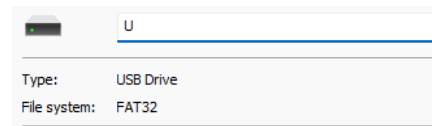

The supplied program update folder "DLResorce". (NOT compressed/ziped) must be the only item on the "U" drive.

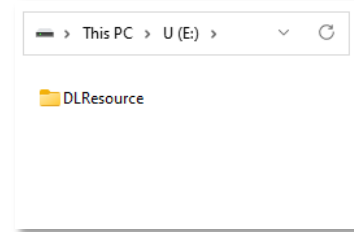

Using a Micro-USB adapter, connect the "U" drive to the display (Micro-USB port is on the rear inside a rubber seal).



With the display powered off, hold down the far left button, the far right button, and the center button and power on the display while holding all three of these buttons. You can let go after you see something on the screen.




You will be prompted to enter the UPDATE PASSWORD, the password is 22222. Press the center button.

Next you will see a blue screen and at the top you should read "The U disk has been plugged in!"



Press the copyFile button, and wait (could be up to 30 seconds), and you should then see "copying file!" and then "Copy completed!" (at this point you can remove the USB drive at any time after this)

Now click the "exitCopy" button.

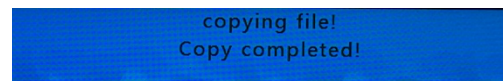

We will now see a new screen "program update", and you should see just one file. Select it using the center button. You will then see red text at the bottom "Upgrading please wait!" and then a second later "Upgrade successful!"

The update process is complete. Power off the display and back on again and you will now be running the new program.

